

Caixun

androidtv

INSTRUCTION MANUAL

Model No.:
LE-43F2G

IMPORTANT

Please read this manual carefully before installing and operating the TV
Keep this manual handy for further reference

Content

Safety Information	1
Important Safety Precautions	1
TV Buttons And Terminal Interface	2
External device connection diagram	2
TV Install And Connect.	3
TV Stand Installation Instructions	3
OSD	4
1、 Initial Installation	4
2、 HOME	7
3、 Settings	8
4、 App Install/Move/Uninstall	10
5、 TV Source setting	11
Help.	12
Specifications	13
Remote Controller.	14

Safety Information



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.



Warning
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personnel.



If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.

Important Safety Precautions

- 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.
- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments /accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.



Caution:

 
- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The socket-out shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 21)  Never place the TV, remote control or batteries near naked flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.
- 22) The USB terminal should be loaded with 0.5 A under normal operation. These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock do not perform any servicing other than that contained in the operating instructions, unless you are qualified to do so.
- 23) The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- 24)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
- 25) The maximum using environment temperature is 45 degrees.
The Maximum using altitude is 2000 meters

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.

One key:

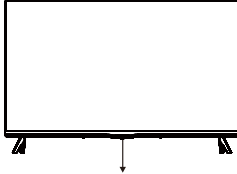

Press this button in standby mode to turn on / off the TV.

Seven keys:


⏻	Turn ON/OFF Power.
SOURCE / []	External Signal Input Selection.
MENU / OK	Display Main MENU And Confirm MENU Item Selection.
CH+/-	Selecting Channel.
VOL+/-	Adjusting Volume.

Terminal Interface


Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

AV IN	AV input External AV Signal Input	EARPHONE	EARPHONE output When earphones are plugged in, speakers are disabled
CI	CI SLOT The card reader input CI (common interface) this requires CAM (conditional access module) used for pay TV.	USB 5V \pm 500mA	USB input Connect a USB device here to play its media files or to record programs via the PVR function.
HDMI	HDMI input Digital signal input from HDMI video connector.	OPTICAL	OPTICAL output Connect the SPDIF receiver.
ANT 750	ANT 75 Connect the antenna/cable tv input (75/VHF/UHF)	RJ 45	RJ45 Connect the Internet.

 External device connection diagram

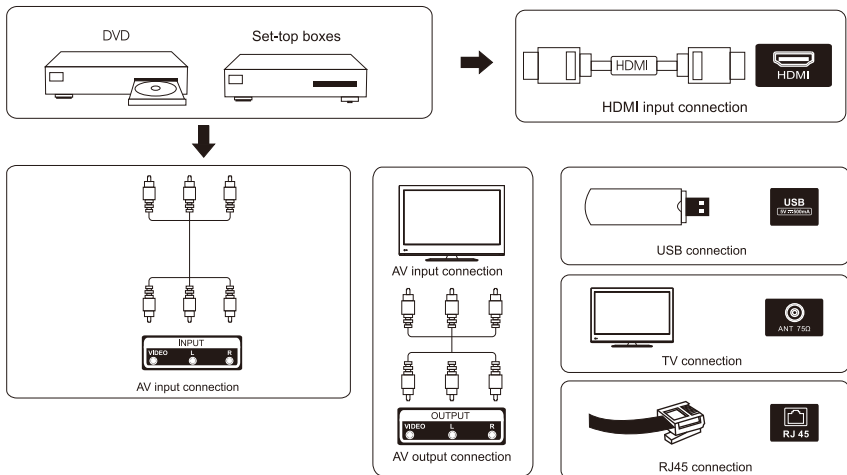


TV Install And Connect

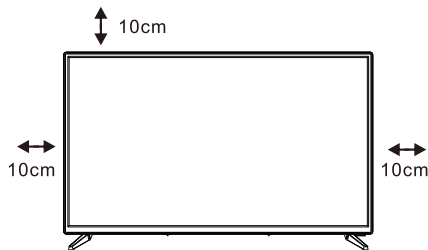 

Set your TV

 To put your TV on a firm place which can bear the weight of the TV.
To avoid danger, please don't positions the TV near water or heating place (such as light, candle, heating machine),do not block the ventilation at the back of TV.

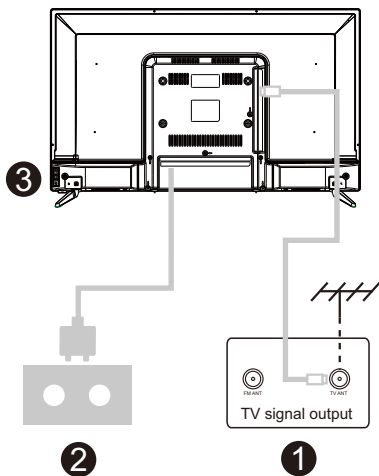

Connect antenna and power

- 1.Connect the antenna cable to the antenna socket on the back of the TV.
- 2.To plug the power cord of TV (AC 100-240V~ 50/60Hz).

Turn on TV

 
- 3.Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV

Note:

Picture for reference purposes only.

TV Stand Installation Instructions

- 1.Open the carton and remove the TV and scattered accessories and base (some models without base).
- 2.In order to avoid damaging the TV,please cover it with soft mattress,put it on the table, face down on the soft material and screw the neck of the base to the TV.
- 3.screw the base and connected to the TV.
4. the installation is complete.

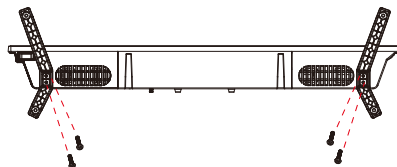

Note:

Picture for reference purposes only.
Please prevail in kind

Initial Installation

1. Initial Installation

The first time you switch the TV on, the initial step screen appears which guides you through the initial process. Please according to the Text Tips to finish initial installation.

 
 
1.1 Language select

->Press **^/V** on remote control to select the language option, then kick **【OK】** to confirm.

1.2 Quickly set up your TV with your Android phone? (Continue/skip)

Steps:

1. On your Android Phone, open the Pre-installed app "Google".
2. Type or say, "Ok Google, set up my device".
3. Tap the model name on the list.

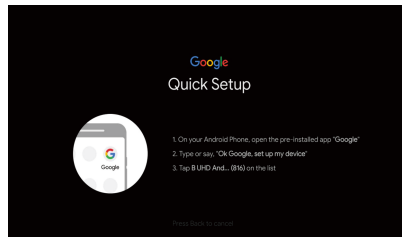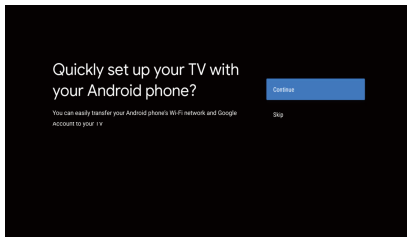


1.3 Configure the network

->Select wired or wireless to connect to internet.

->If you select skip, it could be performed in homepage or settings menu.

1.4 Google Account Sign in

 Sign in to get new apps, recommendations, movies, the Assistant, and more from Google. Two ways to login Google account:

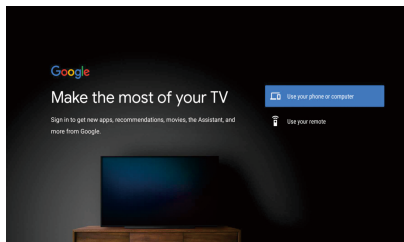


Initial Installation

->Use your phone or computer:

1. Visit androidtv.com/setup on your phone or computer, Make sure your other device is on the same Wi-Fi network as your Android TV™.

 2. Enter the display code on your phone or computer.

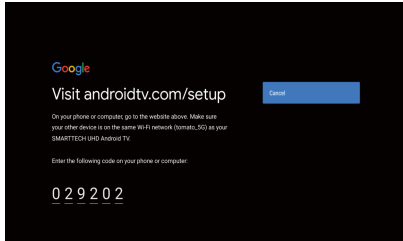

->Use your remote:

Use the remote to enter your Google account and password to sign in to Google account .

 
1.5 Google setting

In these steps you will setup the Terms of Service, Location, Help improve Android and additional Google functions.

1.6 Play Auto Installs

Select install or un-install the recommended apps and Google apps by using this process.

->Press "Continue" to the next setting page.

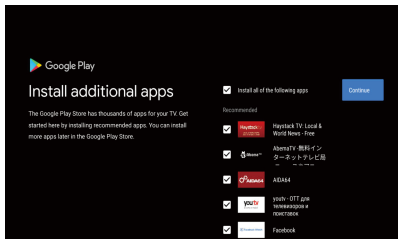

1.7 Country select

->Press \wedge/\vee on remote control to select the country option, then kick **【OK】** to confirm.

1.8 Set the TV password for Parental Controls, "0000" is invalid.

1.9 Select TV mode(Home/Retail)

Home mode is optimized for efficient energy usage for home use.

Retail mode is optimized to store demo with fixed settings.

Initial Installation

 
 
1.10 Chromecast built-in™

Select On/Off to make Chromecast built-in available.



1.11 TV Channel Setting

->Select Antenna/Cable/Satellite to scan TV channel.

->If you select skip , the channel scan could be performed in menu.

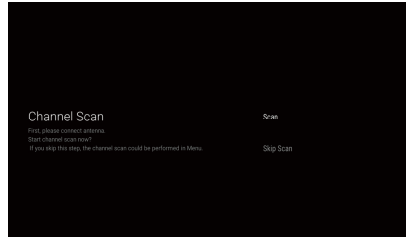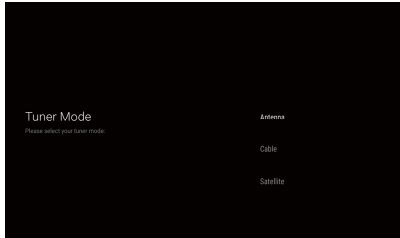

  1.12 Setup completed and Disclaimer Terms

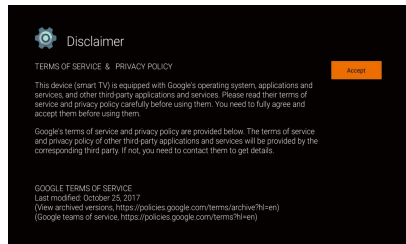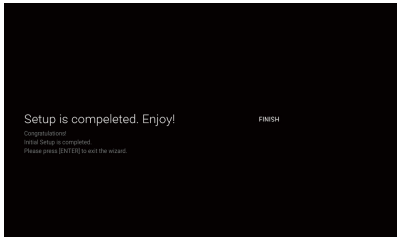

1.13 Pairing Bluetooth Remote

-> Press 'BACK' and 'VOL-' simultaneously on remote control to enter the Bluetooth pairing mode.

The Indicator light on remote control will flash when enter the pairing mode.


-> Press 【OK】 to begin pairing.





-> Press on remote control to skip the pairing mode.



 
HOME

2. HOME

When initial setup is complete, the TV will enter the homepage by default, or press  on remote control to display the homepage.

-> Press     on remote control to switch between Google Search, Apps, Play Next, Netflix, YouTube, and more on the Homepage.

-> Press **【OK】** to enter.

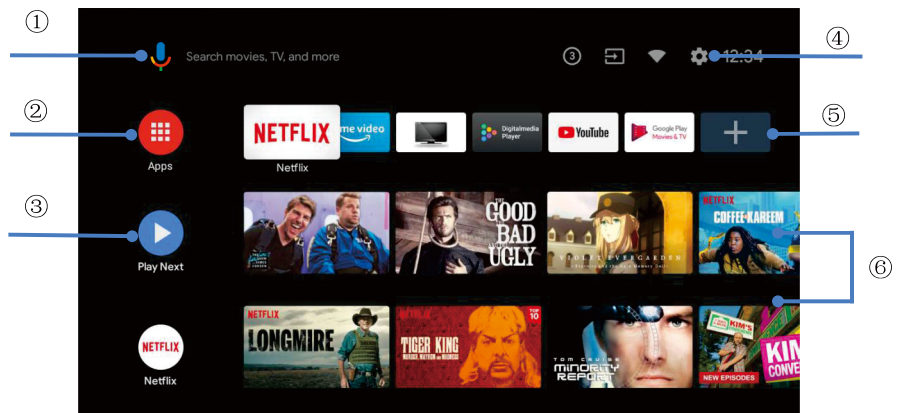

① Google Search

Search for content with your voice

② Apps

List of downloaded and pre-loaded apps on your device

③ Play Next

Based on your watch history and includes next episode in a series or unfinished movies

④ Settings

Manage apps and TV controls, change preferences, sounds, and account

⑤ Favorite apps

Quick access to frequently used apps

⑥ Channels

For easy content discovery

Settings

 
3.Settings

Allows to set various performance of your TV .

-> Press **</>** on remote control to select "Settings"which is in the upper right corner of the screen.

-> Press **^/∨** on remote control to select the option which you want to adjust in the Settings menu.

-> Press **【OK】** to enter.

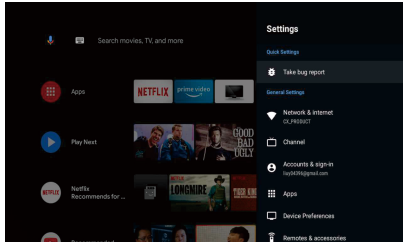

3.1 Network&internet

Adjust all network setting and check connection if you have connection problems.

 
-> Press **^/∨** on remote control to select "Network&internet" in the settings menu.

-> Press **^/∨** on remote control to select:Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

3.2 Channel

->Press **^/∨** on remote control to select "Channel" menu.

->Press **【OK】** to enter "Parental Controls", then click **^/∨** or use the number buttons on remote control to enter your PIN(Password for Parental Controls).

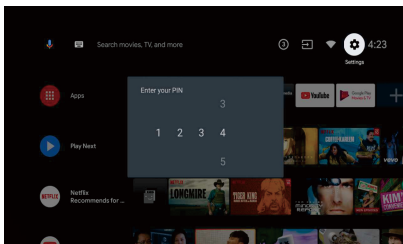


3.3 Device Preferences

-> Press **^/∨** on remote control to select "Device Preferences".

-> Press **^/∨** on remote control to select the options of About, Date&time, Timer, Language, Inputs, Picture, Sound, Reset,etc.

Settings

 ->Press **【OK】** to jump to the corresponding sub-option.

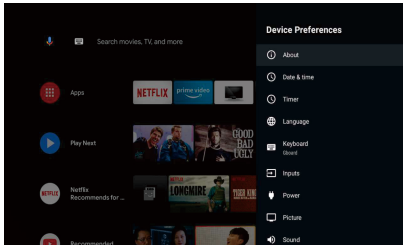


3.3.1 About

-> Press **^/V** on remote control to select “About”.

-> Press **^/V** on remote control to check additional information such as System update, Device name, Restart, Status, and more.

 -> Press **←** on remote control to return to the previous menu. Press **EXIT** on remote control to exit the menu.

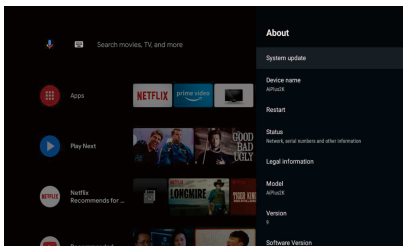

3.3.2 Reset

If select reset, it will erase all data from your device's internal storage, including:your Google account, System and app data and settings, and downloaded apps.

-> Press **^/V** on remote control to select “Reset”.

-> Press **^/V** on remote control to select “Cancel” or “Erase everything”.

 
App Install/Move/Uninstall

4 App Install/Move/Uninstall

-> Press \wedge/\vee on remote control to select “Apps” on Homepage, then click **【OK】** to enter.

-> Select “Get more apps” and input app name.

->Select “search” which is in the upper right corner of the page.

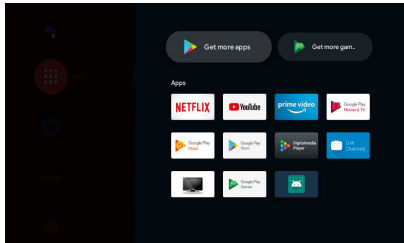

Example for “Facebook”

4.1 Install

-> Input “Facebook”, find “Facebook” App will show in the list, then click **【OK】** to select it.

->Select “Install”, when completed select to open or Uninstall.

4.2 Move

 
-> Select “Facebook”, press and hold **【OK】** on remote control, then click \wedge/\vee on remote control to select “Move”.

-> Press $\wedge/\vee /</>$ on remote control to move, then click **【OK】** to confirm.

4.3 Uninstall

-> Select “Facebook”, press and hold **【OK】** on remote control, then click \wedge/\vee on remote control to select “Uninstall”.


-> press **【OK】** to uninstall.

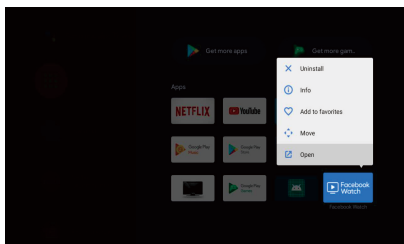


TV Source setting

5 TV Source setting

The way to enter TV source in Homepage:

 -> Press  on remote control or Select "Live TV" on Homepage.

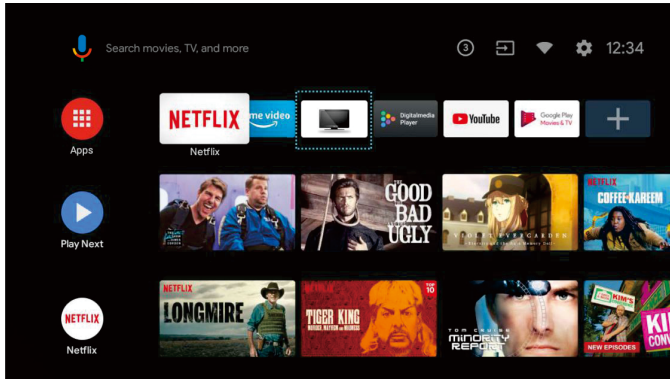

-> Press  on remote control.

-> Press  on remote control to select "Channels" and select "New Channels Available" to enter.

Help

No power	<ul style="list-style-type: none"> ● Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.
Signal not received properly	<ul style="list-style-type: none"> ● Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna. ● If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.
No picture	<ul style="list-style-type: none"> ● Check if the antenna at the back of the TV is connected properly. ● View other channels to see if the problem still occurs.
Video appears with no audio	<ul style="list-style-type: none"> ● Try increasing the volume. ● Check if the TV's sound is on mute or not.
Audio is present, but video does not appear or is discolored	<ul style="list-style-type: none"> ● Try adjusting the contrast and brightness.
Static noise affects video and audio quality	<ul style="list-style-type: none"> ● Check if the antenna at the back of the TV is connected properly.
Broken lines on screen	<ul style="list-style-type: none"> ● Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.
Remote doesn't work	<ul style="list-style-type: none"> ● Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control. ● The TV will go into Standby mode if it receives no response in a few minutes.
No video (PC mode)	<ul style="list-style-type: none"> ● Please check if the cable is connected to the VGA port correctly, or if the cable is bent in some places.
Vertical line blinking (PC Mode)	<ul style="list-style-type: none"> ● Enter the main menu, and adjust the vertical placement to eliminate the vertical line.
Horizontal tearing (PC Mode)	<ul style="list-style-type: none"> ● Adjust the horizontal placement of the screen to clear any horizontal lines.
Screen is too bright or dark (PC Mode)	<ul style="list-style-type: none"> ● Adjust the brightness or contrast in the main menu.
No response from the PC	<ul style="list-style-type: none"> ● Check if the PC's display resolution is set to a compatible resolution for the TV.
Lines appearing when a device is connected to the RCA port	<ul style="list-style-type: none"> ● Make sure you are using a cable in good quality.
Problems are unresolved	<ul style="list-style-type: none"> ● Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact the service center.

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

Specifications

Screen Size	power Consumption	Main accessories
43"	70W/80W	User's manual x1
50"	100W/108W/135W	Remote controller x1
55"	100W/135W/140W/160W	Power cord x1
65"	159W/165W/195W	AAA Batteries x2 (Optional)

★ LIFE TIME : 60,000 Hrs



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, Pro logic, and the double-D symbol are trademarks of Dolby Laboratories.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Google, Google Play, YouTube, Android TV and other marks are trademarks of Google LLC.

This user manual for reference only

Remote control



- ① Switches the TV between on and standby mode
- ② Indicator light
- ③ Microphone hole
- ④ Mute or restore your TV sound
- ⑤ Media control
Fast forward/back
Play the last/next program
Play/Pause/Stop/Record program
- ⑥ Inputs
Display/Select signal source options
- ⑦ Menu
Displays the OSD (On Screen Display) menu
- ⑧ Navigation buttons
Cursor UP/LEFT/RIGHT/DOWN
- ⑨ Back
Press to move back through menus
- ⑩ Google Search
- ⑪ Exit
Exit the OSD menu
- ⑫ HOME
Displays the home screen.
- ⑬ NETFLIX
Connects to NETFLIX for viewing online TV shows and films (internet connection required).
- ⑭ YouTube
Connects to YouTube (internet connection required).
- ⑮ SUBT
- ⑯ Teletext
Turn on and off the teletext function. (DTV mode)
- ⑰ Audio
Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature)

